


## Front VT-VZ

(front spring preload 10mm)

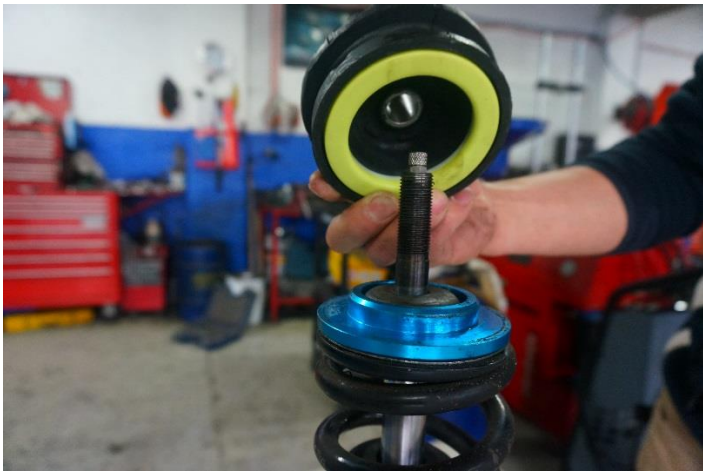

## Rear VT-VZ

### Ride Height Adjustment of Non-Full Coilover

#### Instructions

The spring and the strut are separated on the rears of some certain vehicles. Please make an adjustment in ride height and length of strut by carrying out the following steps:

- 1) A is to lower or raise the ride height.
- 2) After required ride height is reached, it's essential to adjust the length of coilover by adjusting B to your desired position.
- 3) After required ride height is reached, put the tire on and move the vehicle around 5-10 m. Please adjust B to let C insert 1/3 parts into the strut and leave 2/3 parts outside the strut; tighten the spring perch lock of B.
- 4) The unusual noise and a breakdown will occur if failure in adjustment in the length of coilover is reached.
- 5) 20mm of the mount need to leave threaded on the shock body to be safe.

