

VE VF commodore Front



VE VF Commodore Rear




Front coilover



Make sure there are one washer on top of the pillowball upper mount and another one beneath it.

Set the driver side camber bracket to 1 o'clock then set the passenger side to 11 o'clock before installation

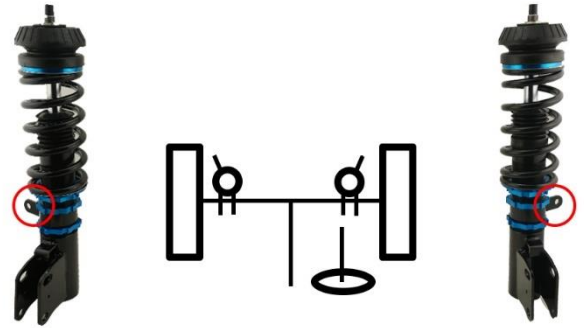

Rear coilover

Free-length of the spring when the spring is unloaded



Set the rear spring pre-load to 169mm



**IMPORTANT NOTE:**

FRONT SPRING PRELOAD **12MM**

REAR SPRING PRELOAD **16MM**

**MORE INFORMATION:**

[www.ksracing.com.au](http://www.ksracing.com.au) >TECHNICAL>K-SHOCK , K-SPORT coilover installation instruction.